



- 1 Measure out the placement of the wall mount and mark the wall.

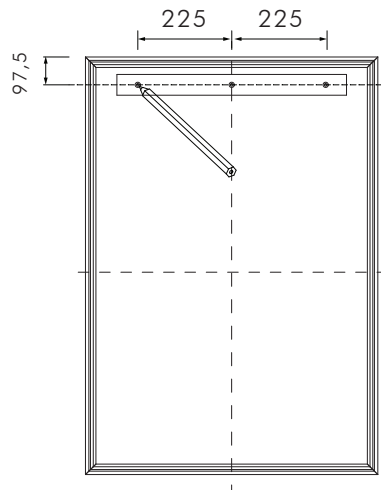

- 2 Drill holes on the marks and insert wall plugs. Screw the wall mount onto the wall. Plugs and screws not included.

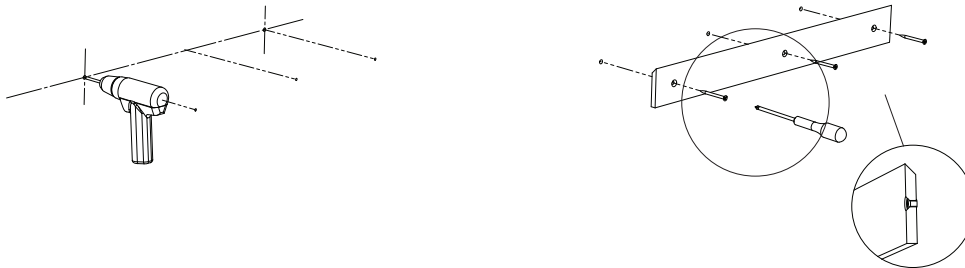

- 3 Hang the pinboard onto the wall mount. Your pinboard is now ready for use.

